 



- 1.
- 2.




3. 12

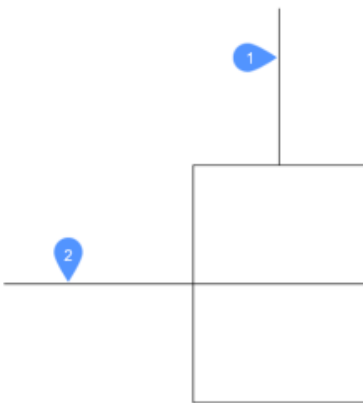

4.

12REFERENCECURVES REFERENCECURVES Reference Curves
REFERENCECURVES 1 2

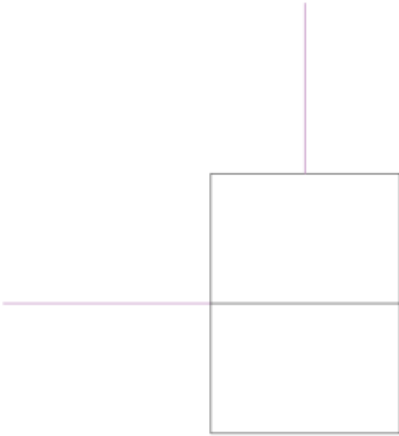

REFERENCE_CURVES

5. REFERENCECURVESPARAMETRIZE

Parameters Manager

Name	Expression	Value
User Parameters		
AngleTolerance_1	9	9
OffsetTolerance_1	0.870854	0.870854
Angle_1	0	0
Offset_1	0	0
Angle_2	270	270
Offset_2	0	0

6.

7.

INSERT



INSERT¹⁰⁹

